



Corner Wine Rack Assembly Instructions:




Step 1. Align all 5 rack uprights with ends marked “B” at the same end. This end of rack uprights is the bottom of the rack and will sit on the floor.

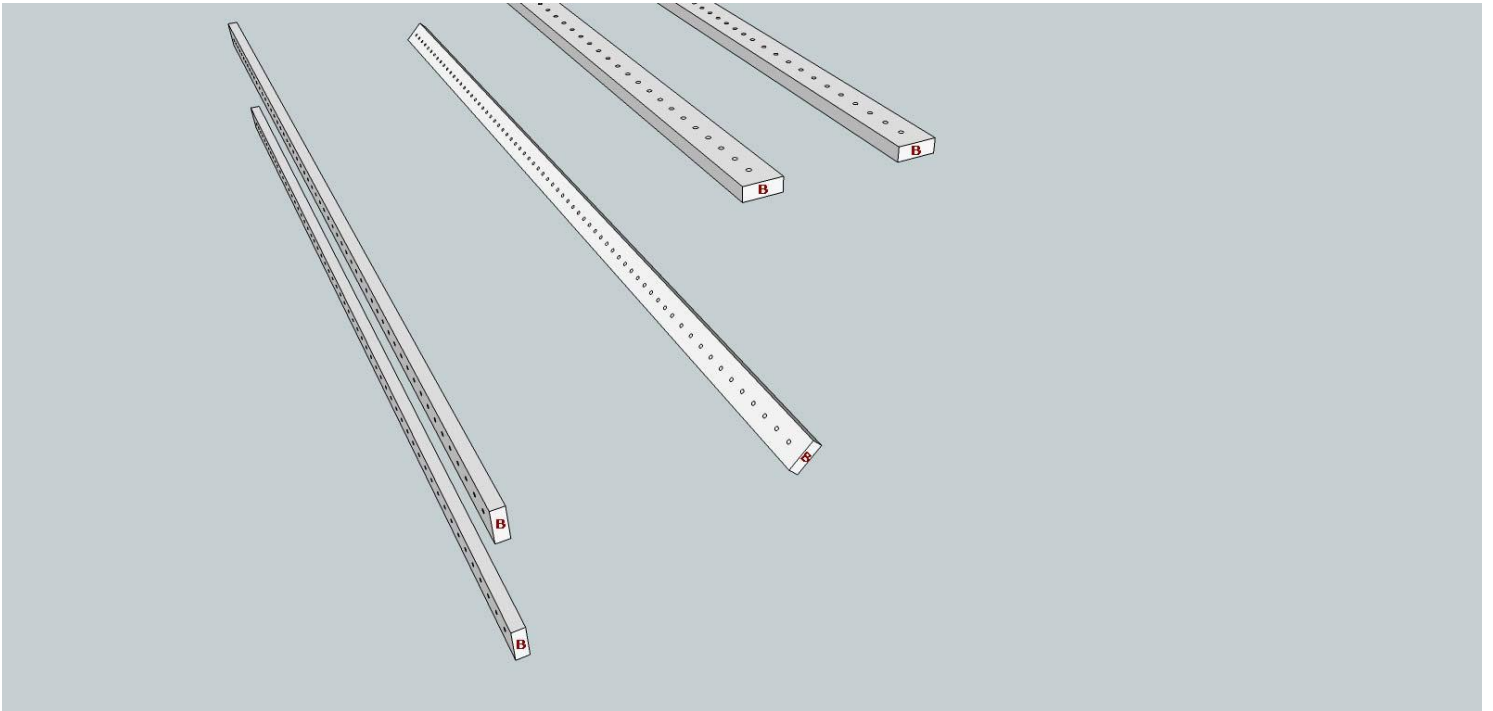

Step 2. Thread bolts through pre-drilled lowest(1st) rack upright holes and pre-drilled shelf holes. Hand tighten nuts on inside of shelves. Skip 3 holes between each bolt and repeat Step 2 for each remaining shelf. Do this for all 5 rack uprights.

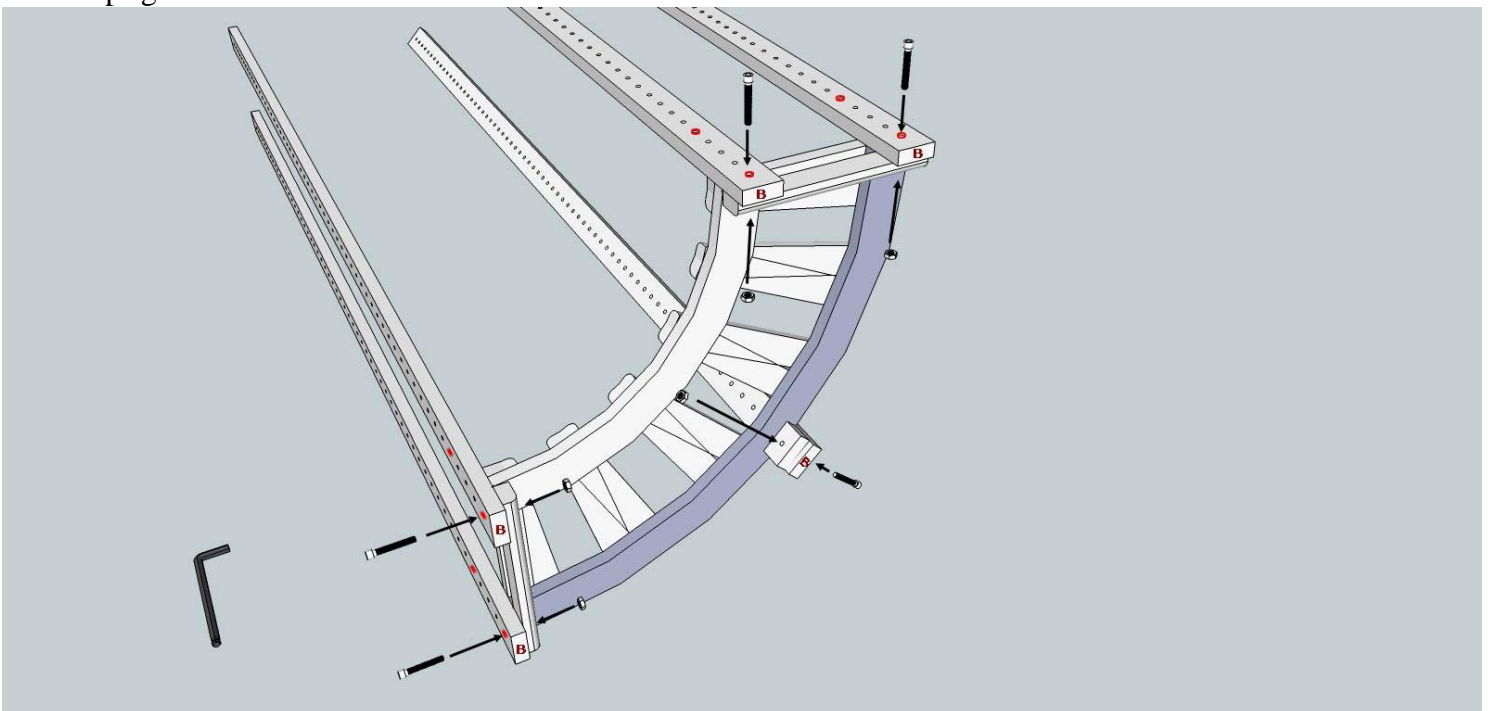

Step 3. Using Allen wrench provided, tighten all bolts and stand rack upright.

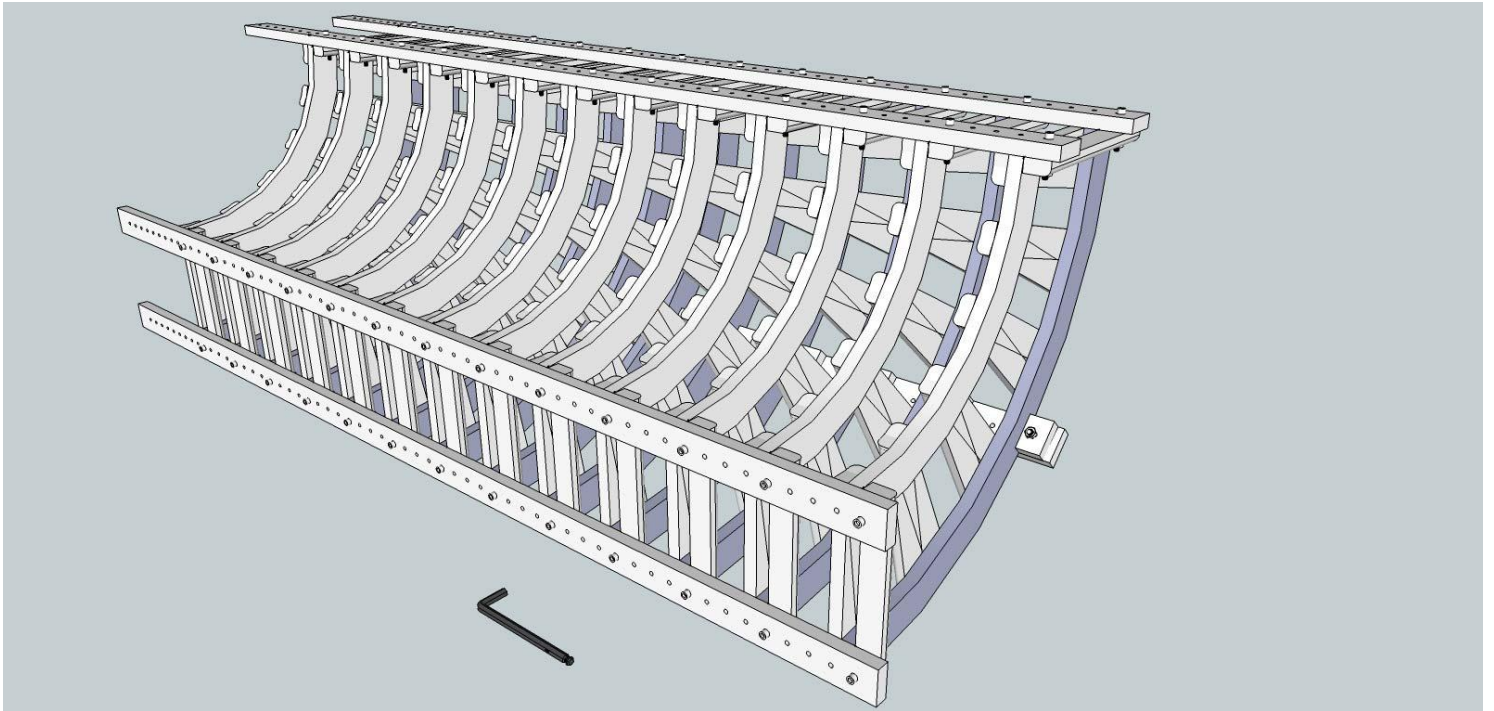

Step 4. If your rack includes a top, slide rack top over rack uprights at top of rack.

