



Multi-Bin Assembly Instructions:


Step 1. Attach (2) Bin Frame Attachment Pieces to Bin Frame Sections at top using Nuts and Bolts provided. Repeat this step to attach (2) Bin Frame Attachment Pieces at bottom. Tighten bolts with Allen Wrench provided.

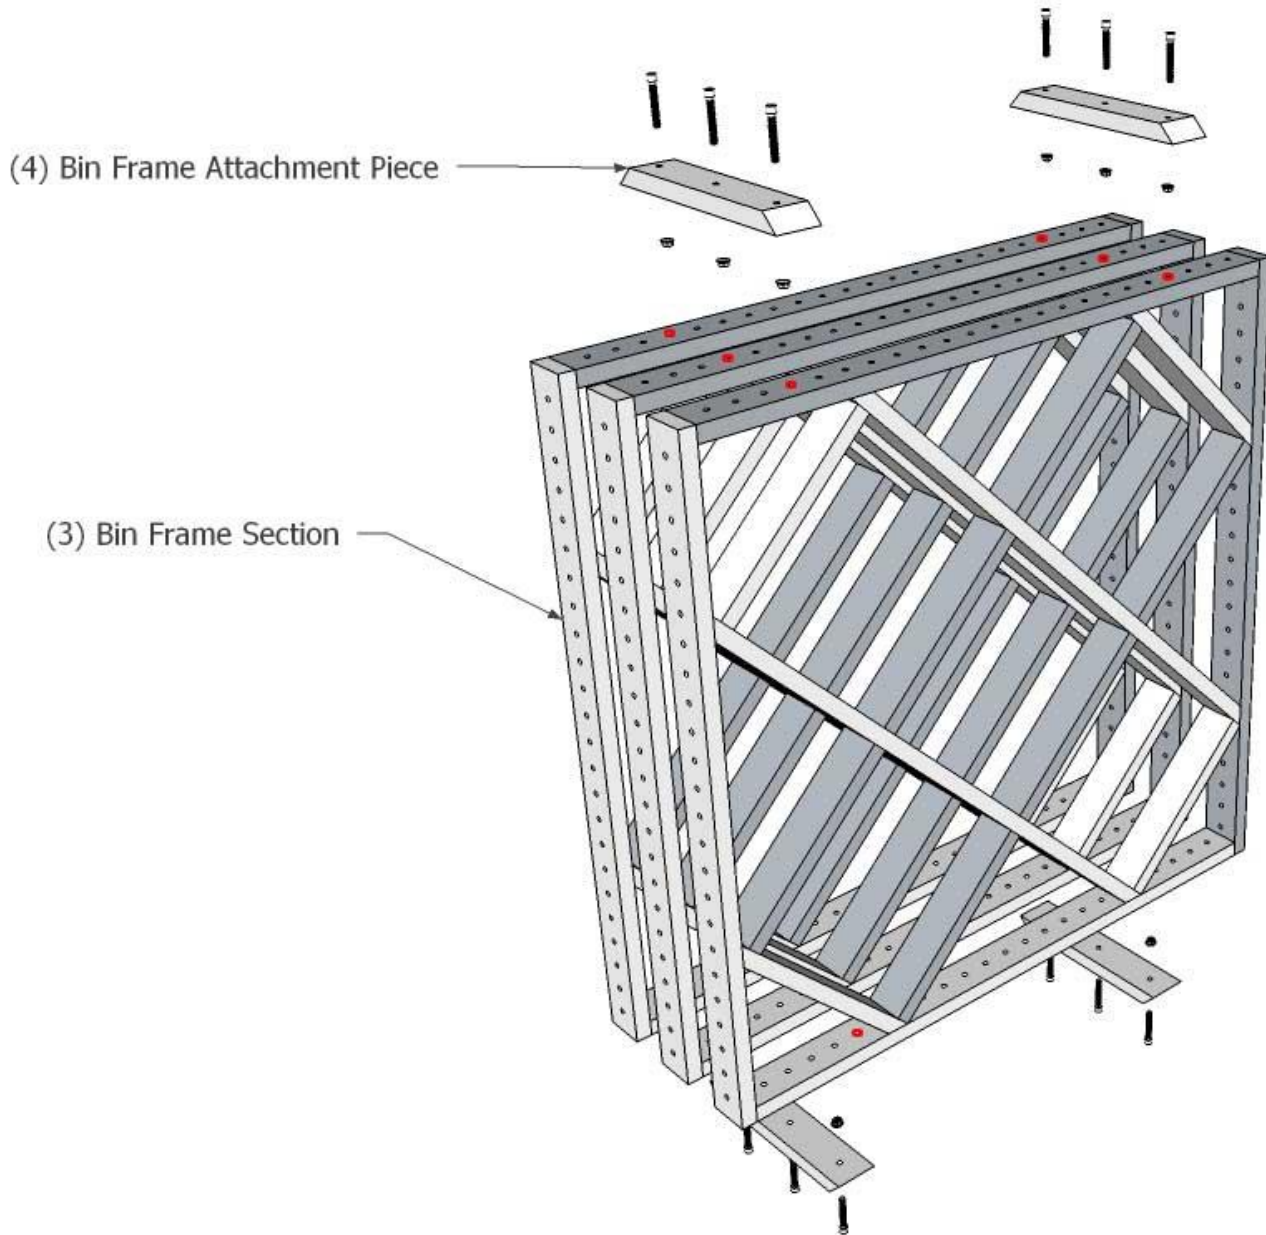

Step 2. Rack uprights marked with “B” on ends will be at bottom of rack and will sit on Baseboard Assembly. Attach rack uprights to Bin Frame Sections with nuts and bolts. Use highlighted holes in rack uprights and highlighted holes in Bin Frame Sections. Tighten bolts with Allen Wrench provided.

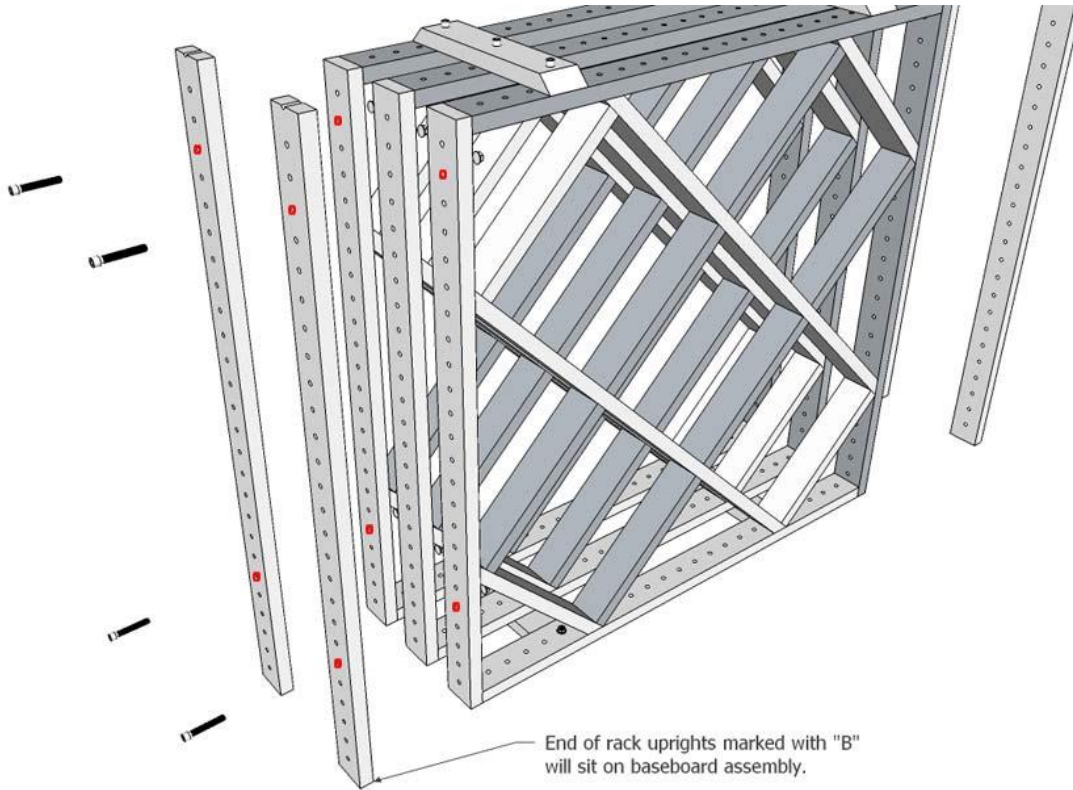

Step 3. Sit Baseboard Assembly on floor. Set completed Bin Frame Sections with rack uprights onto Baseboard Assembly. Rack top will slide over rack uprights.

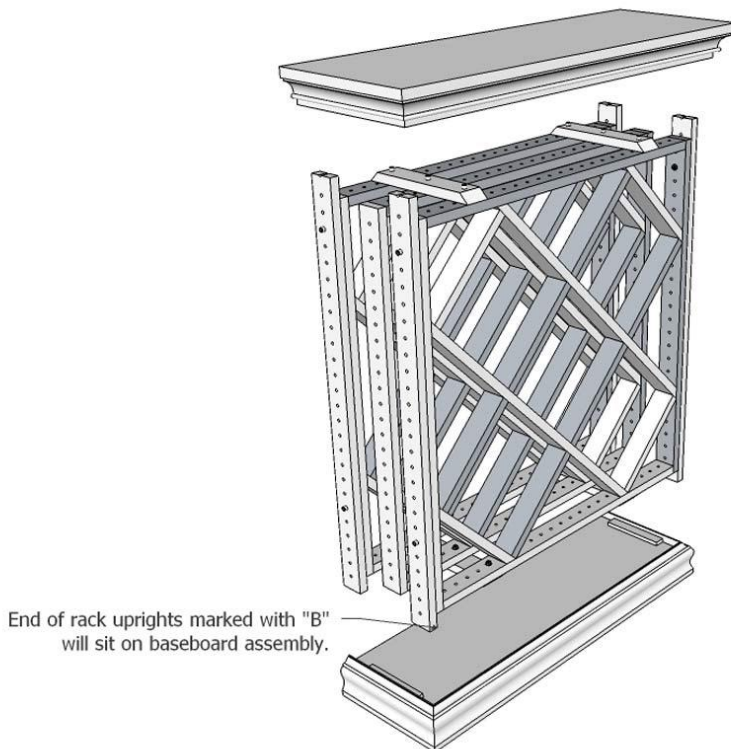

Step 4. Add wine to your completed rack.

